

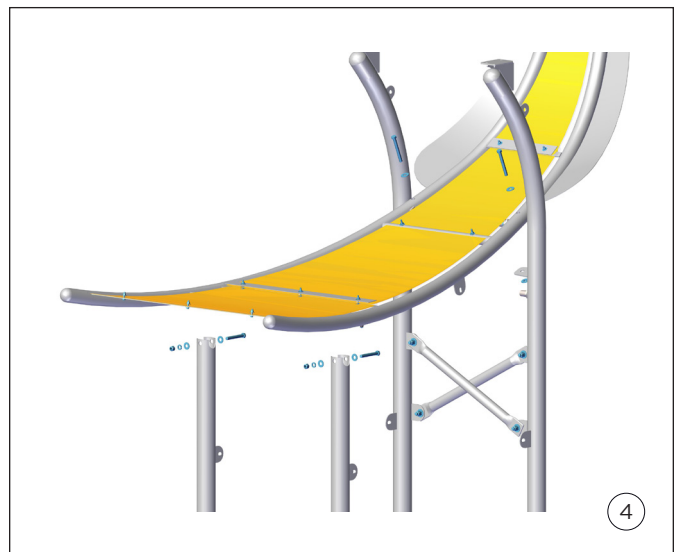
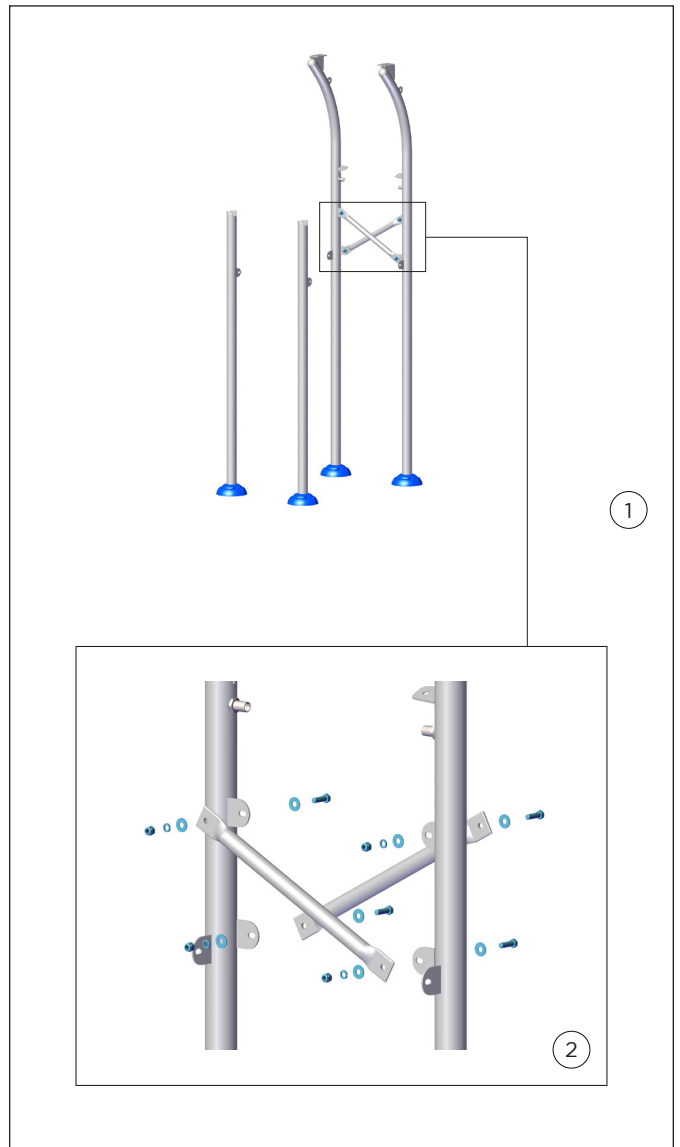
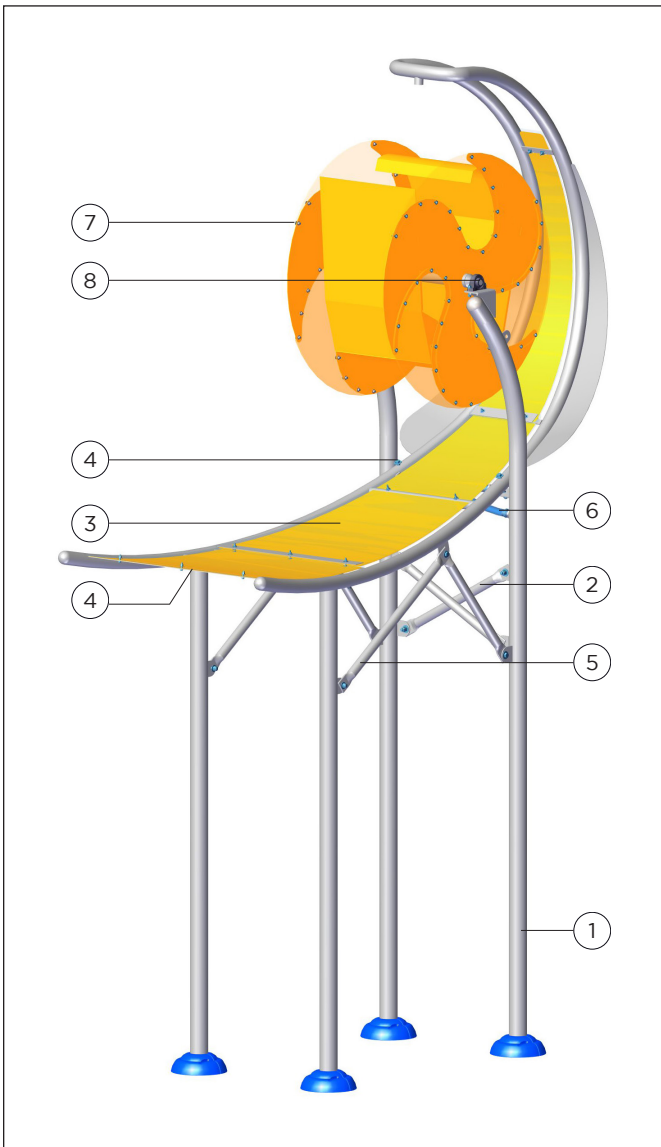
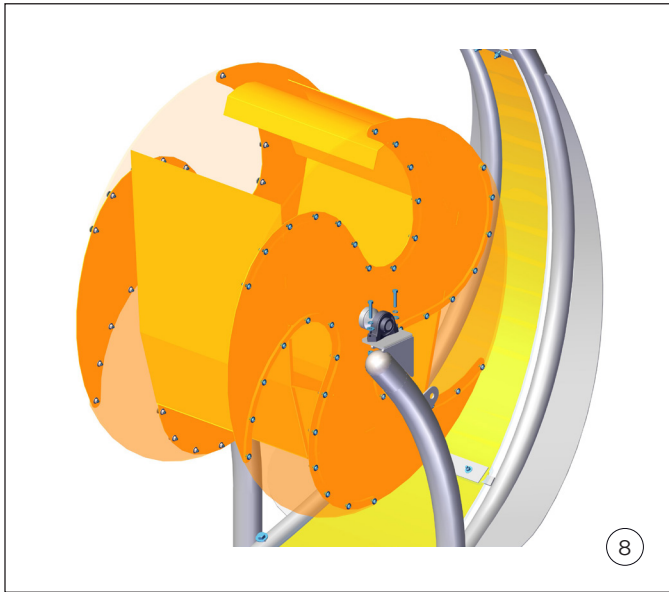



SUPERWAVE

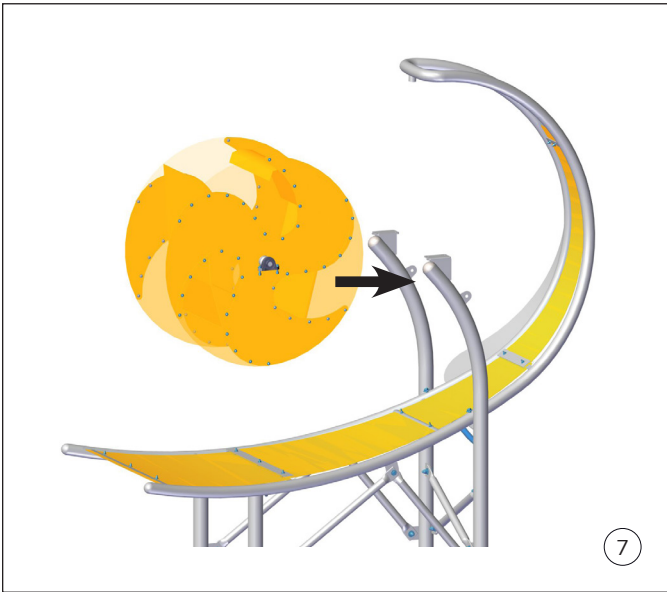

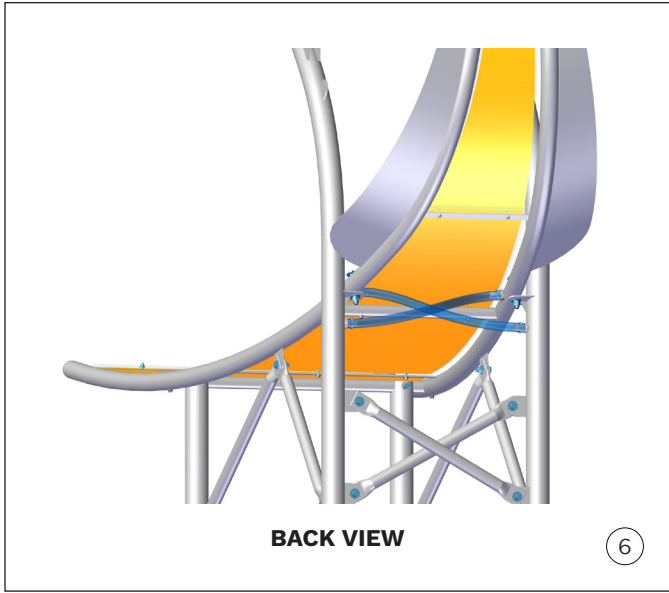

WINTERIZATION

SUPERWAVE WINTERIZATION

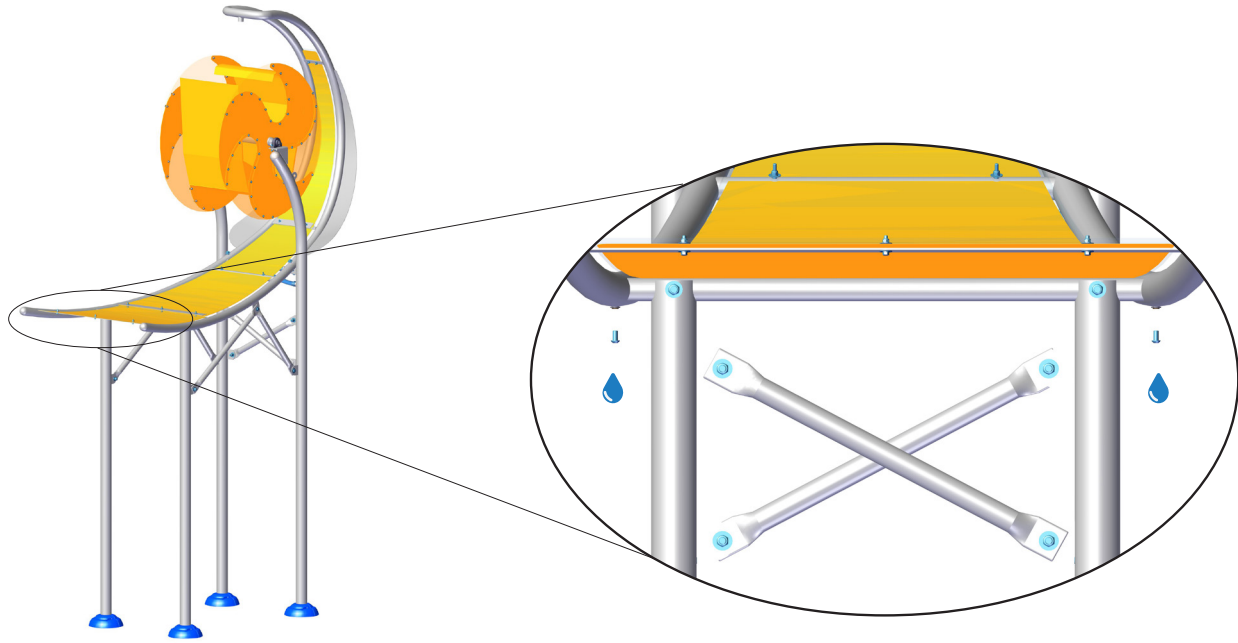

STEPS

1. Unscrew the (2) screws to drain the water.