


PLAN VIEW

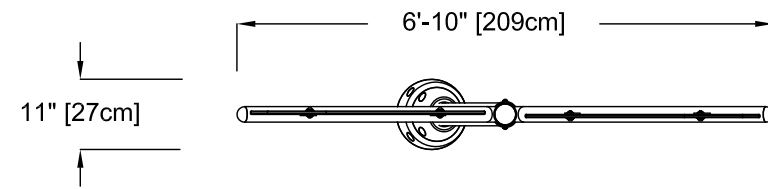


FRONT ELEVATION VIEW

SIDE ELEVATION VIEW

ASSEMBLY INSTRUCTIONS:

- 1- WHILE THE PRODUCT IS IN A HORIZONTAL POSITION, REMOVE THE SCREWS AND WASHERS FROM THE BOTTOM CASING OF THE TOP SUBASSEMBLY.
- 2- REMOVE TAPE OVER END OF CASING OF THE TOP SUBASSEMBLY. ENSURE BEARING IN THE END OF CASING DOES NOT FALL OUT.
- 3- SLIDE THE CASING OF THE TOP SUBASSEMBLY INTO THE CASING OF THE BOTTOM SUBASSEMBLY AND OVER THE SHAFT  
ENSURE BEARING IN TOP SUBASSEMBLY DOES NOT FALL OUT.
- 4- ALIGN HOLES OF CASING FROM THE BOTTOM SUBASSEMBLY WITH THE HOLES OF THE CASING IN THE TOP SUBASSEMBLY.  
RE-INSTALL WASHERS AND SCREWS PREVIOUSLY REMOVE FROM TOP SUBASSEMBLY.
- 5- INSTALL FEATURE ONTO ANCHOR.

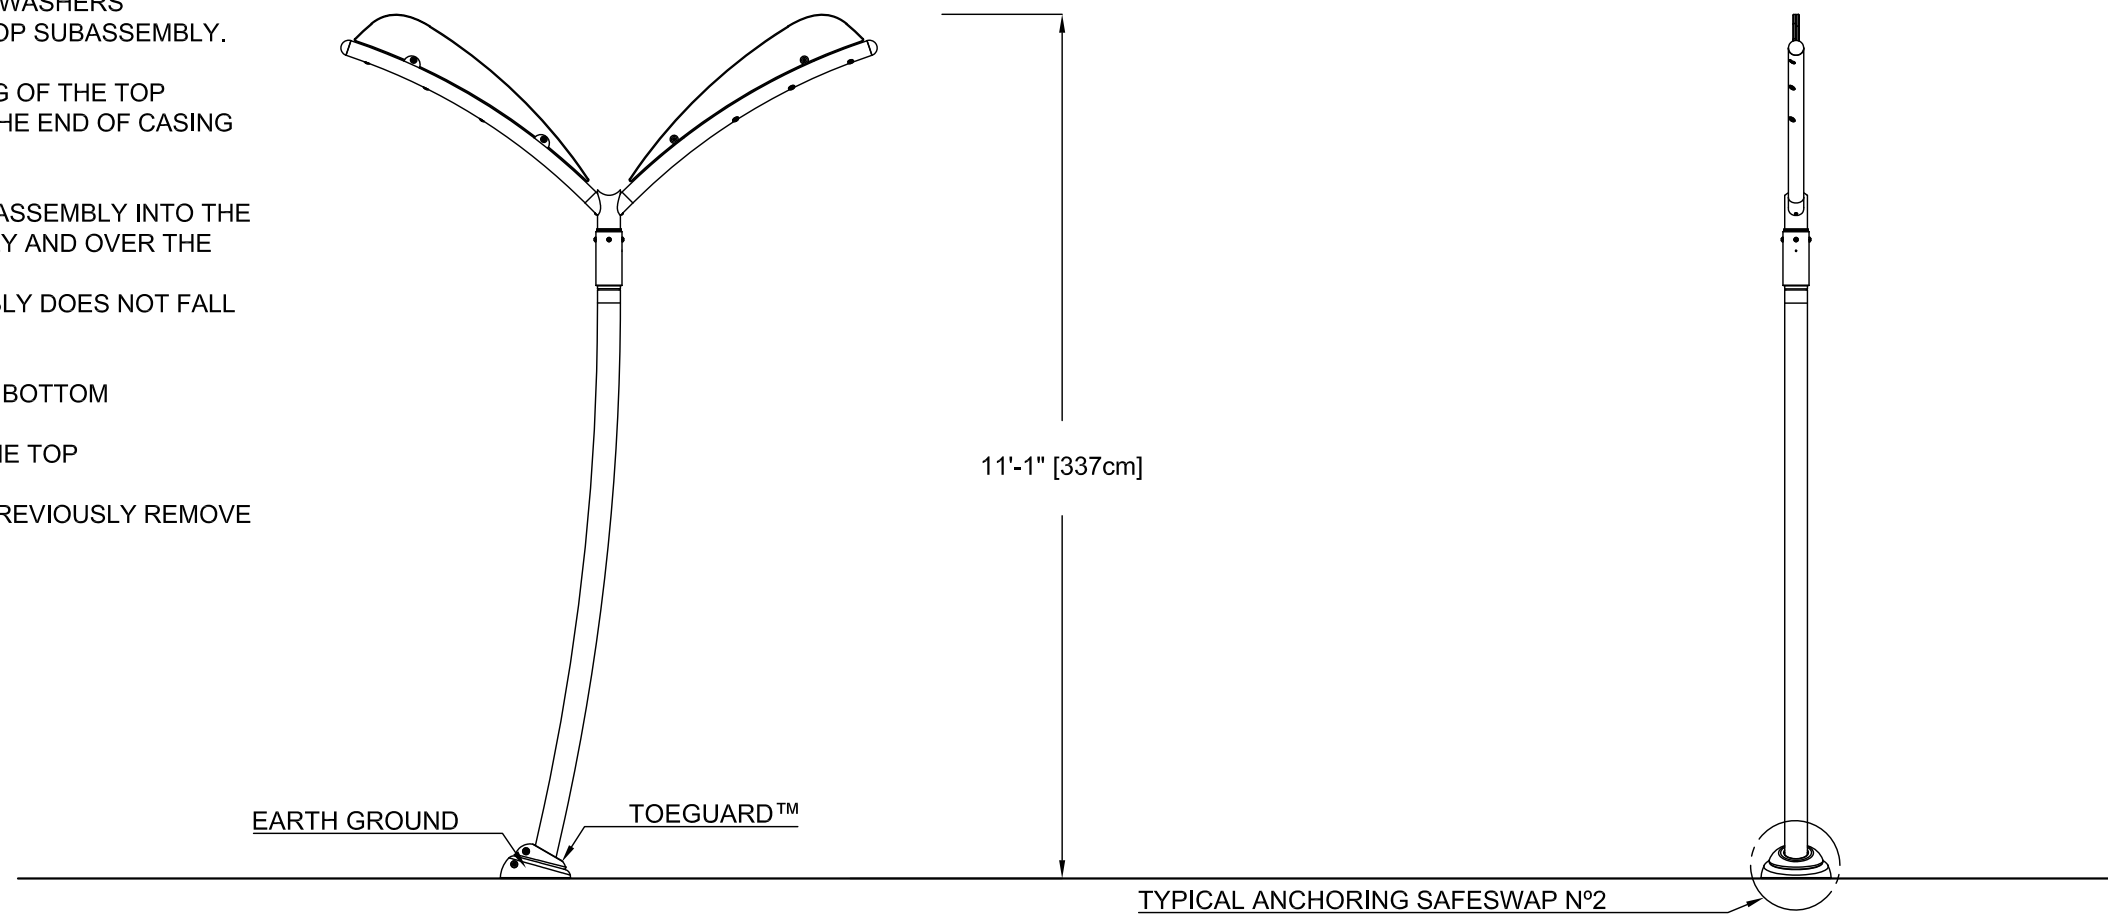

PRODUCT NAME: HELICO NANO

PRODUCT INFORMATION

PRODUCT NUMBER: VOR-7798.2XXX

DATE: 02/25/20

SHEET NO: 1/1

11"x17" SHEET SIZE

